


Assembly instruction for BNC connectors BNC

Connectors BNC/BRG (code 368 208) and BNC/CCA (code 368 210)

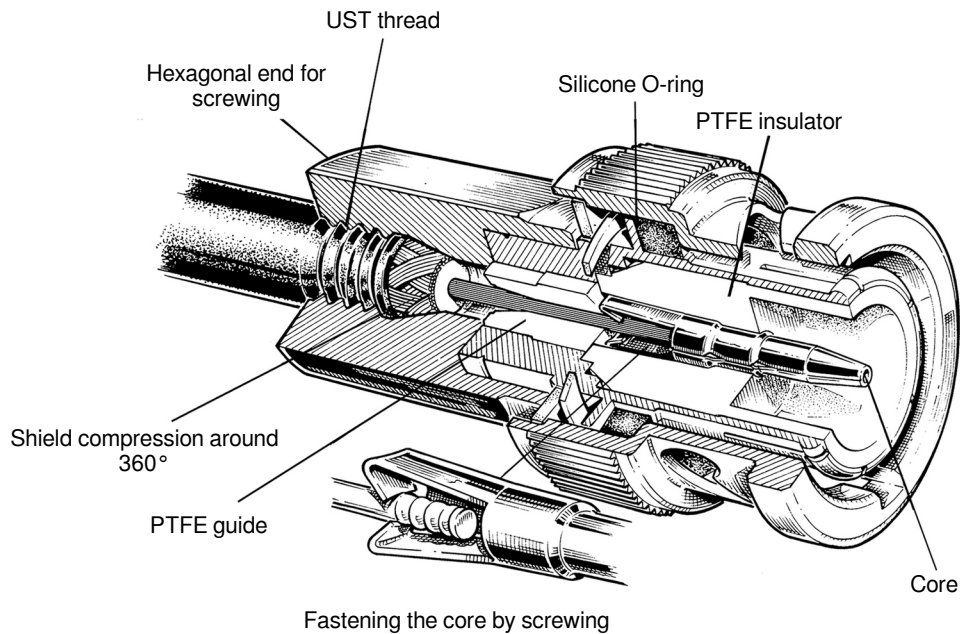

CABLE PREPARATION

- 1 °) Strip the cable as shown Fig. b
- 2°) Cut the core with 30° of angle for a good cable position in the connector. wire
- 3°) Twist the core to make it more rigid.
- 4 °) Fold down a millimeter the shield to discover a part of the dielectric. This step is important, if it is poorly done, there will be short circuits.
- 5°) Insert the cable into the connector and screw it in with help of hexagonal end, pushing the cable slightly to help it.


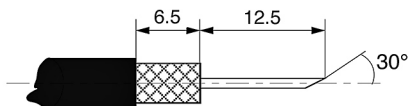


Fig. b

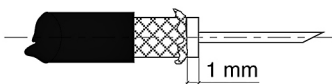

BAMO INTERNATIONAL

22, Rue de la Voie des Bans · Z.I. de la gare · 95100 ARGENTEUIL

Tel +33 (0)1 30 25 83 20 Web www.bamo.eu

Fax +33 (0)1 34 10 16 05 E-mail export@bamo.fr

Assembly instruction for BNC
connectors
BNC

15-11-2018

M-368.01-EN-AA

RES

368-01 /1